

# Holophane Europe Limited

## Widerlite Bulkhead

### Installation Instruction Sheet

When installing the Bulkhead care must be taken to prevent injury to persons or damage to equipment.

#### THIS LUMINAIRE MUST BE EARTHED

Before commencing installation, ensure that the mains electrical supply is disconnected and that all personnel are cleared from the area beneath luminaire mounting positions.

**Note: If methods of mounting other than those recommended by Holophane are to be used, the installer must ensure that the method used and the materials or equipment chosen, are in all respects suitable and capable of bearing the weight of the luminaire for the chosen installation.**

1. Using a screwdriver open the front (1) casting by means of the quarter turn un-fastener (2).
2. Slacken off the two fixing screws (4). Remove the geartray (3) by sliding it up and over the fixing screws (4) by means of the two keyhole slots. Disconnect the earth.
3. Mount the back casting to the mounting surface using the four fixing holes. Screws/bolts supplied by others.

**Note: If mounting the back casting onto an uneven surface do not overtighten the fixing screws as this may cause distortion in the back casting.**

4. The supply cable can now be brought through the bottom cable entry hole. Supply cable may now be wired in to terminal connector (5) on the back of the geartray (3).


**Note: If 'through - wiring' remove and discard the blanking plug in the top of the back casting.**

**N.B. Care must be taken to see that the live cable is connected to the 'L' terminal the earth to the earth terminal and neutral to the 'N' terminal.**

5. Re-connect the earth. Slide the geartray (3) back onto the fixing screws (4) and clamp.
6. Fit lamp, ensuring that the lamp is compatible with the control gear.
7. Secure the front casting (1) by exerting pressure with the thumb or finger onto the fastener (2).

**Note: Do not close the front casting by putting pressure on the glass.**

8. Connect the power supply, switch on and test the luminaire.

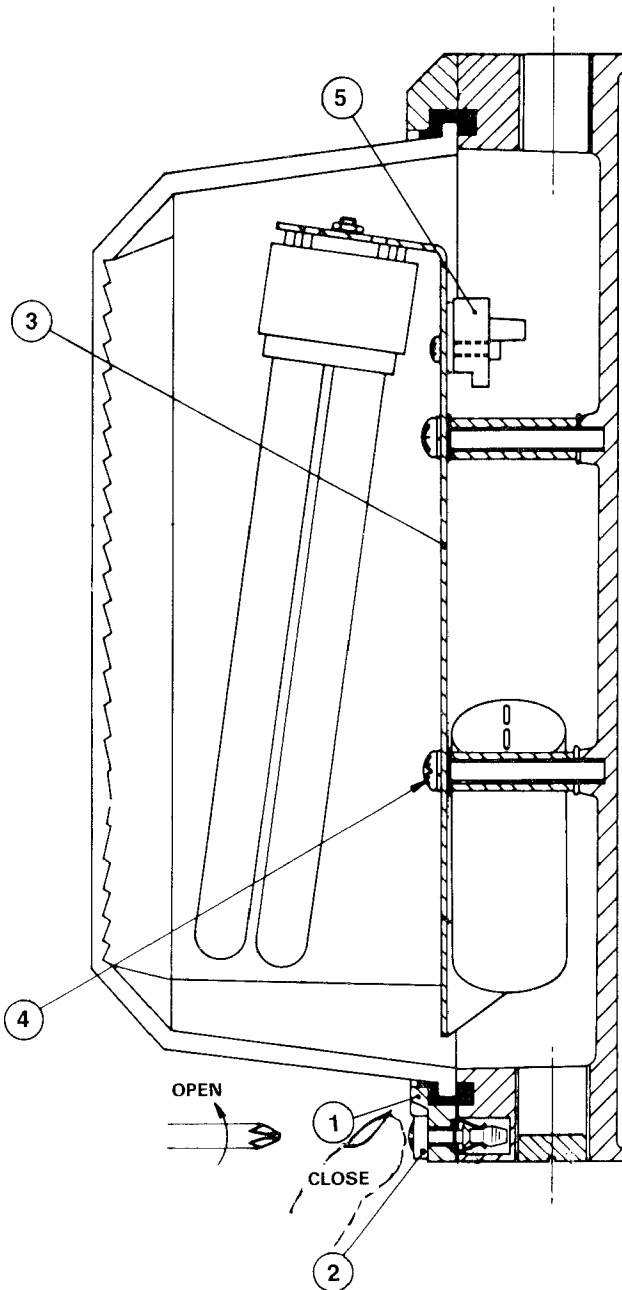

# Holophane®

A 6112  ISO 9001

Holophane Europe Limited.  
 Bond Avenue, Bletchley, Milton Keynes, MK1 1JG. England  
 Telephone: Milton Keynes (01908) 649292.  
 Cablegrams: Holophane Milton Keynes  
 FAX: (01908) 367618 (Group 3/2) direct line

® Registered trade mark of Holophane Europe Ltd.

IS34/A